



2AZ-FE ENGINE CONTROL SYSTEM

RECOMMENDED TOOLS

 
 
 

 
	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	

EQUIPMENT

Ohmmeter	
Radiator cap tester	
Service wire harness	
Torque wrench	

3MZ-FE ENGINE CONTROL SYSTEM

RECOMMENDED TOOLS

 
 
 
 
 
 


	09040-00011	Hexagon Wrench Set	
	(09043-20050)	Socket Hexagon Wrench 5	
	(09043-20080)	Socket Hexagon Wrench 8	
	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	

PP

EQUIPMENT

Ohmmeter	
Radiator cap tester	
Service Wire Harness	
Torque wrench	

RECOMMENDED TOOLS

	09011-12301	Socket Wrench 30 mm	
	09031-00040	Pin Punch .	
	09040-00011	Hexagon Wrench Set	
	(09043-20060)	Socket Hexagon Wrench 6	
	(09043-20100)	Socket Hexagon Wrench 10	
	09043-50100	Bi-hexagon Wrench 10 mm	
	09090-04020	Engine Sling Device	
	09200-00010	Engine Adjust Kit	

PP

EQUIPMENT

Abrasive compound	Valve
Brush	Piston
Caliper gauge	
Carbide cutter	
CO/HC meter	
Compression gauge	
Connecting rod aligner	
Cylinder gauge	
Dial indicator	
Dye penetrant	
Engine tune-up tester	
Groove cleaning tool	Piston ring groove
Heater	
Hexagon wrench (1.5 mm)	Timing belt tensioner
Micrometer	
Pin hole grinder	Connecting rod bushing
Piston ring compressor	
Piston ring expander	
Plastigage	
Precision straight edge	
Press	
Reamer	Cylinder
Ridge reamer	Cylinder
Soft brush	Cylinder head Cylinder block
Solvent	
Spring tester	Valve spring
Steel square	Valve spring
Thermometer	
Torque wrench	
Valve seat cutter	
Valve guide bushing brush	
V-block	
Vernier calipers	
Wire brush	Valve Cylinder head




 
 






SSM

	08826-00080	Seal Packing Black or equivalent (FIPG)	
	08826-00100	Seal Packing 1282B, THREE BOND 1282B or equivalent (FIPG)	
	08833-00070	Adhesive 1324, THREE BOND 1324 or equivalent	







 
 




PP

 

 

 


 
2AZ-FE ENGINE MECHANICAL

SST

 
 

 
 
 
 
 



	09032-00100	Oil Pan Seal Cutter	
	09201-10000	Valve Guide Bushing Remover & Replacer Set	
	(09201-01050)	Valve Guide Bushing Remover & Replacer 5	
	09201-41020	Valve Stem Oil Seal Replacer	
	09202-70020	Valve Spring Compressor	
	(09202-00010)	Attachment	
	09223-15030	Oil Seal & Bearing Replacer	
	09223-22010	Crankshaft Front Oil Seal Replacer	
	09228-06501	Oil Filter Wrench	
	09249-63010	Torque Wrench Adaptor	
	09308-10010	Oil Seal Puller	


PP

	09309-37010	Transmission Bearing Replacer	
	09628-62011	Boll Joint Puller	
	09843-18030	Tacho-pulse Pickup Wire No.2	
	09843-18040	Diagnosis Check Wire No.2	
	09930-00010	Drive Shaft Nut Chisel	
	09950-40011	Puller B Set	
	(09951-04010)	Hanger 150	
	(09952-04010)	Slide Arm	
	(09953-04030)	Center Bolt 200	
	(09954-04010)	Arm 25	
	(09955-04041)	Claw No.4	
	(09957-04010)	Attachment	
	(91111-51014)	Bolt	

	09950-60010	Replacer Set	
	(09951-00200)	Replacer 20	
	09950-70010	Handle Set	
	(09951-07100)	Handle 100	
	09960-10010	Variable Pin Wrench Set	
	(09962-01000)	Variable Pin Wrench Arm Assy	
	(09963-00700)	Pin 7	
	(09963-01000)	Pin 10	

RECOMMENDED TOOLS

	09011-12301	Socket Wrench 30 mm	
	09040-00011	Hexagon Wrench Set	
	(09043-20050)	Socket Hexagon Wrench 5	
	(09043-20060)	Socket Hexagon Wrench 6	
	(09043-20080)	Socket Hexagon Wrench 8	
	(09043-20100)	Socket Hexagon Wrench 10	
	(09043-20120)	Socket Hexagon Wrench 12	
	(09043-30140)	Straight Hexagon Wrench 14	
	09090-04020	Engine Sling Device	
	09200-00010	Engine Adjust Kit	
	09904-00010	Expander Set	

	(09904-00040)	No. 3 Claw	
---	---------------	------------	--

EQUIPMENT

Abrasive compound	Valve
Brush	Piston
Caliper gauge	
Carbide cutter	
CO/HC meter	
Compression gauge	
Connecting rod aligner	
Cylinder gauge	
Dial indicator	
Dye penetrant	
Engine tune-up tester	
Groove cleaning tool	Piston ring groove
Heater	
Hexagon wrench (1.5 mm)	Timing belt tensioner
Micrometer	
Pin hole grinder	Connecting rod bushing
Piston ring compressor	
Piston ring expander	
Plastigauge	
Precision straight edge	
Press	
Reamer	Cylinder
Ridge reamer	Cylinder
Soft brush	Cylinder head Cylinder block
Solvent	
Spring tester	Valve spring
Steel square	Valve spring
Thermometer	
Torque wrench	
Valve seat cutter	
Valve guide bushing brush	
V-block	
Vernier calipers	
Wire brush	Valve Cylinder head

PP

SSM



 
 
 
 


 


	08826-00080	Seal Packing Black or equivalent (FIPG)	
	08826-00100	Seal Packing 1282B, THREE BOND 1282B or equivalent (FIPG)	
	08833-00070	Adhesive 1324, THREE BOND 1324 or equivalent	

 


 



 


 

PP

3MZ-FE ENGINE MECHANICAL

 
 



 

 

 


SST




PP

	09032-00100	Oil Pan Seal Cutter	
	09201-01055	Valve Guide Bushing Remover & Replacer 5.5	
	09201-10000	Valve Guide Bushing Remover & Replacer Set	
	09201-41020	Valve Stem Oil Seal Replacer	
	09202-70020	Valve Spring Compressor	
	(09202-00010)	Attachment	
	09213-54015	Crankshaft Pulley Holding Tool	
	(91651-60855)	Bolt	
	09213-58013	Crankshaft Pulley Holding Tool	
	(91651-60855)	Bolt	
	09222-30010	Connecting Rod Bushing Remover & Replacer	

	09223-00010	Cover & Seal Replacer	
	09223-15030	Oil Seal & Bearing Replacer	
	09228-07501	Oil Filter Wrench	
	09248-55040	Valve Clearance Adjust Tool Set	
	(09248-05410)	Valve Lifter Press	
	(09248-05420)	Valve Lifter Stopper	
	09330-00021	Companion Flange Holding Tool	
	09628-62011	Boll Joint Puller	
	09843-18030	Tacho-pulse Pickup Wire No.2	
	09843-18040	Diagnosis Check Wire No.2	
	09930-00010	Drive Shaft Nut Chisel	
	09950-50013	Puller C Set	

PP

	(09951-05010)	Hanger 150	
	(09952-05010)	Slide Arm	
	(09953-05010)	Center Bolt 100	
	(09953-05020)	Center Bolt 150	
	(09954-05011)	Claw No.1	
	(09954-05030)	Claw No.3	
	(09954-05031)	Claw No.3	
	09950-60010	Replacer Set	
	(09951-00430)	Replacer 43	
	09950-70010	Handle Set	
	(09951-07100)	Handle 100	
	09960-10010	Variable Pin Wrench Set	

	(09962-01000)	Variable Pin Wrench Arm Assembly	
	(09963-00500)	Pin 5	
	(09963-01000)	Pin 10	

EQUIPMENT

Clip	
Measuring Flask	
Ohmmeter	
Radiator cap tester	
Service Wire Harness	
Stopwatch	
Torque wrench	
Vernier calipers	

 
 


 

SSM

	08850-00065	Butyl Tape Set	
--	-------------	----------------	--



2AZ-FE FUEL

SST

PP

	09268-41047	Injection Measuring Tool Set	
	(09268-41110)	Adaptor	
	(09268-41300)	Clamp	
	09268-45014	EFI Fuel Pressure Gauge	
	(09268-41250)	T Joint	
	09842-30080	Wire H EFI Inspection	

RECOMMENDED TOOLS

	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	

EQUIPMENT

Clip	
Measuring Flask	
Ohmmeter	
Radiator cap tester	
Service Wire Harness	
Stopwatch	
Torque wrench	
Vernier calipers	

PP

 
 


 

SSM

	08850-00065	Butyl Tape Set	
--	-------------	----------------	--



3MZ-FE FUEL

SST

PP

	09268-41047	Injection Measuring Tool Set	
	(09268-41110)	Adaptor	
	(09268-41300)	Clamp	
	09268-45014	EFI Fuel Pressure Gauge	
	(09268-41250)	T Joint	
	09842-30070	Wire F EFI Inspection	

RECOMMENDED TOOLS


 
	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	

SSM

	08833-00070	Adhesive 1324, THREE BOND 1324 or equivalent	
--	-------------	---	--

2AZ-FE EMISSION CONTROL

RECOMMENDED TOOLS

	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	

PP

EQUIPMENT



Hand-held vacuum pump	
Ohmmeter	
Service Wire Harness	
Torque wrench	
Vacuum gauge	

SSM

	08833-00070	Adhesive 1324, THREE BOND 1324 or equivalent	
--	-------------	---	--

3MZ-FE EMISSION CONTROL

RECOMMENDED TOOLS

	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	

EQUIPMENT

Hand-held vacuum pump	
Ohmmeter	
Service Wire Harness	
Torque wrench	
Vacuum gauge	

3MZ-FE INTAKE

EQUIPMENT

Hand-held vacuum pump	
Ohmmeter	
Torque wrench	

2AZ-FE EXHAUST

EQUIPMENT

Torque wrench	
---------------	--

3MZ-FE EXHAUST

EQUIPMENT

Torque wrench	
---------------	--

EQUIPMENT

Heater	
Radiator cap tester	
Thermometer	
Torque wrench	
Vernier caliper	

COOLANT

 






Item	Capacity	Classification
Engine coolant	6.2 liters (6.6 US qts, 5.4 Imp. qts)	"Toyota Super Long Life Coolant", "Toyota Long Life Coolant" or equivalent

SSM


	08826-00080	Seal Packing Black or equivalent (FIPG)	
--	-------------	--	--

2AZ-FE COOLING

SST

	09230-01010	Radiator Service Tool Set	
	(09231-01010)	Overhaul Handle	
	(09231-01030)	Claw	
	09231-14010	Punch	
	09960-10010	Variable Pin Wrench Set	
	(09962-01000)	Variable Pin Wrench Arm Assy	
	(09963-00700)	Pin 7	

RECOMMENDED TOOLS

	09082-00050	TOYOTA Electrical Tester Set	
---	-------------	------------------------------	--

EQUIPMENT

Heater	
Radiator cap tester	
Thermometer	
Torque wrench	
Vernier caliper	

COOLANT

 
 

 
Item	Capacity	Classification
Engine coolant	9.2 liters (9.7 US qts, 8.1 Imp. qts)	"Toyota Super Long Life Coolant", "Toyota Long Life Coolant" or equivalent

SSM


	08826-00080	Seal Packing Black or equivalent (FIPG)	
--	-------------	---	--

3MZ-FE COOLING

SST

	09230-01010	Radiator Service Tool Set	
	(09231-01010)	Overhaul Handle	
	(09231-01030)	Claw	
	09231-14010	Punch	

RECOMMENDED TOOLS

	09082-00050	TOYOTA Electrical Tester Set	
---	-------------	------------------------------	--

RECOMMENDED TOOLS

	09200-00010	Engine Adjust Kit	
---	-------------	-------------------	--

EQUIPMENT

Oil pressure gauge	
Straight edge	Oil pump
Torque wrench	

LUBRICANT

Item		Capacity	Classification
Engine oil			
Drain and refill	w/ Oil filter change	3.8 liters (4.0 US qts, 3.3 imp. qts)	API grade SL, Energy-Conserving or ILSAC, multigrade engine oil is recommended. SAE 5W-30 is the best choice for your vehicle, for good fuel economy, and good starting in cold weather.
	w/o Oil filter change	3.6 liters (3.8 US qts, 3.2 imp. qts)	
Dry fill		4.5 liters (4.88 US qts, 4.0 imp. qts)	






 





SSM

 
	08826-00080	Seal Packing Black or equivalent (FIPG)	
--	-------------	---	--

2AZ-FE LUBRICATION

SST

PP

	09032-00100	Oil Pan Seal Cutter	
	09228-06501	Oil Filter Wrench	
	09309-37010	Transmission Bearing Replacer	
	09950-40011	Puller B Set	
	(09951-04010)	Hanger 150	
	(09953-04030)	Center Bolt 200	
	(09954-04010)	Arm 25	
	(09955-04041)	Claw No.4	
	(09957-04010)	Attachment	
	(91111-51014)	Bolt	
	09960-10010	Variable Pin Wrench Set	
	(09962-01000)	Variable Pin Wrench Arm Assy	

	(09963-01000)	Pin 10	
---	---------------	--------	--

EQUIPMENT

Oil pressure gauge	
Straight edge	Oil pump
Torque wrench	

LUBRICANT

Item		Capacity	Classification
Engine oil			
Drain and refill	w/ Oil filter change	4.7 liters (5.0 US qts, 4.1 imp. qts)	API grade SL, Energy-Conserving or ILSAC, multigrade engine oil is recommended. SAE 5W-30 is the best choice for your vehicle, for good fuel economy, and good starting in cold weather.
	w/o Oil filter change	4.5 liters (4.8 US qts, 4.0 imp. qts)	
Dry fill		5.5 liters (5.8 US qts, 4.8 imp. qts)	


 

SSM

08826-00080	Seal Packing Black or equivalent (FIPG)	
-------------	---	--

 
 

3MZ-FE LUBRICATION

SST

PP





	09032-00100	Oil Pan Seal Cutter	
	09223-00010	Cover & Seal Replacer	
	09228-07501	Oil Filter Wrench	

RECOMMENDED TOOLS

	09040-00011	Hexagon Wrench Set	
	(09043-20100)	Socket Hexagon Wrench 10	
	09200-00010	Engine Adjust Kit	

2AZ-FE IGNITION

RECOMMENDED TOOLS


 


	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	
	09200-00010	Engine Adjust Kit	
	(09857-00031)	Spark Plug Gap Gauge	

EQUIPMENT

Spark plug cleaner	
Torque wrench	

3MZ-FE IGNITION

RECOMMENDED TOOLS

	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	
	09200-00010	Engine Adjust Kit	
	(09857-00031)	Spark Plug Gap Gauge	





PP

EQUIPMENT

Spark plug cleaner	
Torque wrench	

2AZ-FE STARTING

RECOMMENDED TOOLS


 


	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	
	09904-00010	Expander Set	
	(09904-00050)	No. 4 Claw	

EQUIPMENT

Ammeter(A)	
Dial indicator	
Ohmmeter	
Sandpaper (#400)	
Service Wire Harness	
Torque wrench	
Vernier calipers	

3MZ-FE STARTING

RECOMMENDED TOOLS




	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	
	09904-00010	Expander Set	
	(09904-00050)	No. 4 Claw	

PP

EQUIPMENT

Ammeter(A)	
Dial indicator	
Ohmmeter	
Sandpaper (#400)	
Service Wire Harness	
Torque wrench	
Vernier calipers	

RECOMMENDED TOOLS

	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	
	09216-00021	Belt Tension Gauge	

 

 

 
 

 


 
EQUIPMENT

 




Ammeter(A)	
Dial indicator	
Ohmmeter	
Sandpaper (#400)	
Service Wire Harness	
Torque wrench	
Vernier calipers	

PP

2AZ-FE CHARGING




SST

	09820-63010	Alternator Pulley Set Nut Wrench Set	
	(09820-06010)	Alternator Rotor Shaft Wrench	
	(09820-06020)	Alternator Pulley Set Nut 22 mm Wrench	
	09950-40011	Puller B Set	
	(09951-04020)	Hanger 200	
	(09952-04010)	Slide Arm	
	(09953-04020)	Center Bolt 150	
	(09954-04010)	Arm 25	
	(09955-04071)	Claw No.7	
	(09957-04010)	Attachment	
	(09958-04011)	Holder	

	09950-60010	Replacer Set	
	(09951-00250)	Replacer 25	
	(09951-00470)	Replacer 47	
	09950-70010	Handle Set	
	(09951-07100)	Handle 100	

PP

RECOMMENDED TOOLS

	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	
	09216-00021	Belt Tension Gauge	

 

 

 
 

 


 
EQUIPMENT

Ammeter(A)	
Dial indicator	
Ohmmeter	
Sandpaper (#400)	
Service Wire Harness	
Torque wrench	
Vernier calipers	

 




PP

3MZ-FE CHARGING

 
 
 
 
 
 
SST

	09820-63010	Alternator Pulley Set Nut Wrench Set	
	(09820-06010)	Alternator Rotor Shaft Wrench	
	(09820-06020)	Alternator Pulley Set Nut 22 mm Wrench	
	09950-40011	Puller B Set	
	(09951-04020)	Hanger 200	
	(09952-04010)	Slide Arm	
	(09953-04020)	Center Bolt 150	
	(09954-04010)	Arm 25	
	(09955-04071)	Claw No.7	
	(09957-04010)	Attachment	
	(09958-04011)	Holder	

PP

	09950-60010	Replacer Set	
	(09951-00250)	Replacer 25	
	(09951-00470)	Replacer 47	
	09950-70010	Handle Set	
	(09951-07100)	Handle 100	

RECOMMENDED TOOLS

	09031-00030	Pin Punch	
	09031-00040	Pin Punch	
	09040-00011	Hexagon Wrench Set	
	(09043-20100)	Socket Hexagon Wrench 10	
	09905-00012	Snap Ring No.1 Expander	
	09905-00013	Snap Ring Pliers	

PP

EQUIPMENT

Straight edge	
Torque wrench	
Vernier calipers	
Dial indicator with magnetic base	
Slide calipers	
Chain block	
Feeler gauge	
Plastic hammer	
Press	
Seal packing 2403, THREE BOND 2403 or equivalent	
Seal packing 2430, THREE BOND 2430 or equivalent	

LUBRICANT






 

 

 

Automatic transaxle fluid		
Dry fill	8.8 liter (9.3 USqts, 7.7 Imp.qts)	ATF type T-IV
Drain and refill	3.5 liter (3.7 USqts, 3.1 Imp.qts)	

SSM



 
 
 
 
 

 

 

	08826-00090	Seal Packing 1281, THREE BOND 1281 or equivalent (FIPG)	
	08833-00080	Adhesive 1344 THREE BOND 1344 LOCTITE 242 or equivalent	













U151E AUTOMATIC TRANSAXLE

SST


 



 






	09023-12701	Union Nut Wrench 17mm	
	09215-00013	Crankshaft Bearing Remover & Replacer Set B	
	(09215-00471)	Camshaft Bearing Remover & Replacer	
	09223-15020	Oil Seal & Bearing Replacer	
	09223-15030	Oil Seal & Bearing Replacer	
	09308-00010	Oil Seal Puller	
	09316-12010	Transfer Bearing Replacer	
	09316-20011	Transfer Bearing Replacer	
	09350-32014	TOYOTA Automatic Transmission Tool Set	
	(09351-32010)	One-way Clutch Test Tool	
	(09351-32020)	Stator Stopper	



 
 

 




PP

	(09351-32070)	No.2 Piston Spring Compressor	
	(09351-32140)	Oil Seal Replacer	
	09387-00020	Direct Clutch Wrench	
	09387-00030	Counter Drive Gear Holding Tool	
	09387-00041	Bearing Puller Assembly	
	(09387-01010)	Claw No.1	
	(09387-01021)	Claw No.2	
	(09387-01030)	Pin	
	(09387-01040)	Bearing Puller Body	
	09387-00050	Under Drive Gear Puller	
	09387-00070	First & Reverse Brake Wrench	
	09387-00080	Counter Drive Gear Nut Wrench	

 
 
 
 
 


 
	09502-12010	Differential Bearing Replacer	
	09506-35010	Differential Drive Pinion Rear Bearing Replacer	
	09514-35011	Rear Wheel Bearing Puller	
	09550-60010	Differential Side Bearing Replacer	
	(09951-00490)	Replacer 49	
	09564-32011	Differential Preload Adaptor	
	09608-10010	Steering Knuckle Oil Seal Replacer	
	09649-17010	Steering Knuckle Tool	
	09710-30050	Suspension Arm Bushing Replacer	
	09726-40010	Lower Control Shaft Bearing Replacer	
	09930-00010	Drive Shaft Nut Chisel	
	(09931-00010)	Handle	

PP

	(09931-00020)	Nut Chisel	
	09950-00020	Bearing Remover	
	09950-00030	Bearing Remover Attachment	
	09950-40011	Puller B Set	
	(09957-04010)	Attachment	
	09950-60010	Replacer Set	
	(09951-00230)	Replacer 23	
	(09951-00260)	Replacer 26	
	(09951-00320)	Replacer 32	
	(09951-00450)	Replacer 45	
	(09951-00490)	Replacer 49	
	(09951-00500)	Replacer 50	

	(09951-00590)	Replacer 59	
	(09957-04010)	Attachment	
	09950-60020	Replacer Set No.2	
	(09951-00810)	Replacer 81	
	(09951-00890)	Replacer 89	
	(09951-00910)	Replacer 91	
	(09951-01030)	Replacer 103	
	09950-70010	Handle Set	
	(09951-07100)	Handle 100	
	(09951-07150)	Handle 150	

RECOMMENDED TOOLS

	09031-00030	Pin Punch	
	09040-00011	Hexagon Wrench Set	
	(09043-20100)	Socket Hexagon Wrench 10	
	09042-00010	Torx Socket T30	
	09905-00012	Snap Ring No.1 Expander	
	09905-00013	Snap Ring Pliers	
	(09904-00090)	Claw Set	
	09924-12411	Deep Socket Wrench 41	

PP

EQUIPMENT

Dial indicator with magnetic base	
Feeler gauge	
Vernier calipers	
Torque wrench	
Plastic hammer	
Straight edge	
Press	
Punch	

LUBRICANT

Automatic transaxle fluid		
Dry fill	8.0 liter (8.5 USqts, 7.0 Imp.qts)	ATF type T-IV
Drain and refill	3.5 liter (3.7 USqts, 3.1 Imp.qts)	






 

 

 

SSM

	08826-00090	Seal Packing 1281, THREE BOND 1281 or equivalent (FIPG)	
	08833-00070	Adhesive 1324, THREE BOND 1324 or equivalent	
	08833-00080	Adhesive 1344 THREE BOND 1344 LOCTITE 242 or equivalent	

 
 
 
 
 
 
 

 



PP








 




U250E AUTOMATIC TRANSAXLE

SST


 



 






	09023-12701	Union Nut Wrench 17mm	
	09215-00013	Crankshaft Bearing Remover & Replacer Set B	
	(09215-00471)	Camshaft Bearing Remover & Replacer	
	09223-15020	Oil Seal & Bearing Replacer	
	09223-15030	Oil Seal & Bearing Replacer	
	09308-00010	Oil Seal Puller	
	09316-12010	Transfer Bearing Replacer	
	09316-20011	Transfer Bearing Replacer	
	09350-32014	TOYOTA Automatic Transmission Tool Set	
	(09351-32010)	One-way Clutch Test Tool	
	(09351-32020)	Stator Stopper	



 
 

 




PP

	(09351-32070)	No.2 Piston Spring Compressor	
	(09351-32140)	Oil Seal Replacer	
	09387-00020	Direct Clutch Wrench	
	09387-00030	Counter Drive Gear Holding Tool	
	09387-00041	Bearing Puller Assembly	
	(09387-01010)	Claw No.1	
	(09387-01021)	Claw No.2	
	(09387-01030)	Pin	
	(09387-01040)	Bearing Puller Body	
	09387-00050	Under Drive Gear Puller	
	09387-00070	First & Reverse Brake Wrench	
	09387-00080	Counter Drive Gear Nut Wrench	

	09502-12010	Differential Bearing Replacer	
	09506-35010	Differential Drive Pinion Rear Bearing Replacer	
	09514-35011	Rear Wheel Bearing Puller	
	09550-60010	Differential Side Bearing Replacer	
	(09951-00490)	Replacer 49	
	09564-32011	Differential Preload Adaptor	
	09608-10010	Steering Knuckle Oil Seal Replacer	
	09649-17010	Steering Knuckle Tool	
	09710-30050	Suspension Arm Bushing Replacer	
	09726-40010	Lower Control Shaft Bearing Replacer	
	09930-00010	Drive Shaft Nut Chisel	
	(09931-00010)	Handle	

PP

	(09931-00020)	Nut Chisel	
	09950-00020	Bearing Remover	
	09950-00030	Bearing Remover Attachment	
	09950-40011	Puller B Set	
	(09957-04010)	Attachment	
	09950-60010	Replacer Set	
	(09951-00230)	Replacer 23	
	(09951-00260)	Replacer 26	
	(09951-00320)	Replacer 32	
	(09951-00450)	Replacer 45	
	(09951-00490)	Replacer 49	
	(09951-00500)	Replacer 50	

	(09951-00590)	Replacer 59	
	(09957-04010)	Attachment	
	09950-60020	Replacer Set No.2	
	(09951-00810)	Replacer 81	
	(09951-00890)	Replacer 89	
	(09951-00910)	Replacer 91	
	(09951-01030)	Replacer 103	
	09950-70010	Handle Set	
	(09951-07100)	Handle 100	
	(09951-07150)	Handle 150	

EQUIPMENT


 

Vernier calipers	
Dial indicator with magnetic base	
Torque wrench	

LUBRICANT

Item	Capacity	Classification
Brake fluid	-	SAE J1703 or FMVSS No. 116 DOT3

 
 
 

 
 

CLUTCH

SST

 
 
 
 


	09023-00101	Union Nut Wrench 10 mm	
	09301-00220	Clutch Guide Tool	
	09333-00013	Universal Joint Bearing Remover & Replacer	

PP

RECOMMENDED TOOLS

	09031-00030	Pin Punch	
	09040-00011	Hexagon Wrench Set	
	09042-00010	Torx Socket T30	
	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	
	09905-00013	Snap Ring Pliers	
	95416-00140	Gas Leak Detector (Halogen Leak Detector) (DENSO Part No.)	

RECOMMENDED TOOLS

	09011-12301	Socket Wrench 30 mm	
	09031-00040	Pin Punch	
	(09043-20060)	Socket Hexagon Wrench 6	
	09040-00011	Hexagon Wrench Set	
	09042-00050	Torx Socket T45	
	09905-00012	Snap Ring No.1 Expander	

EQUIPMENT

Dial indicator with magnetic base	
Torque wrench	
Slide calipers	
V-block	
Micrometer	
Dial indicator	
Cylinder gauge	
Feeler gauge	
Precision straight edge	

 

 

 

 
 

 
 
LUBRICANT


 
 
 

 
 



 

Item	Capacity	Classification
Manual transaxle oil (w/ Differential oil)	2.5 liters (2.6 US qts, 2.2 Imp. qts)	API GL-4 or GL-5 SAE 75W-90

E351 MANUAL TRANSAXLE

 
 

 








SST

 










 
PP

	09229-55010	Oil Cooler Relief Valve Wrench	
	09308-00010	Oil Seal Puller	
	09309-12020	5th Driven Gear Replacer	
	09316-20011	Transfer Bearing Replacer	
	09316-60011	Transmission & Transfer Bearing Replacer	
	(09316-00031)	Replacer B	
	(09316-00041)	Replacer C	
	09387-00041	Bearing Puller Assembly	
	(09387-02010)	Oil Seal Replacer	
	(09387-02020)	One-way Clutch Test Tool Set	
	09506-30012	Differential Drive Pinion Rear Bearing Cone Replacer	

 









	09520-01010	Drive Shaft Remover Attachment	
	09520-24010	Differential Side Gear Shaft Puller	
	(09520-32040)	Shocker Set	
	09564-32011	Differential Preload Adaptor	
	09608-00071	Drive Pinion Rear Bearing Cone Replacer	
	09608-06041	Front Hub Inner Bearing Cone Replacer	
	09608-10010	Steering Knuckle Oil Seal Replacer	
	09608-32010	Steering Knuckle Oil Seal Replacer	
	09612-65014	Steering Worm Bearing Puller	
	(09612-01040)	Claw D	
	(09612-01050)	Hanger Pin with Nut	
	09631-12090	Seal Ring Tool	

PP

 
 
 
 
	09930-00010	Drive Shaft Nut Chisel	
	09950-00020	Bearing Remover	
	09950-00030	Bearing Remover Attachment	
	09950-30012	Puller A Set	
	(09951-03010)	Upper Plate	
	(09953-03010)	Center Bolt	
	(09954-03010)	Arm	
	(09957-04010)	Attachment	
	09950-40011	Puller B Set	
	(09957-04010)	Attachment	
	09950-50013	Puller C Set	
	(09957-04010)	Attachment	

	09950-60010	Replacer Set	
	(09951-00180)	Replacer 18	
	(09951-00280)	Replacer 28	
	(09951-00320)	Replacer 32	
	(09951-00420)	Replacer 42	
	(09951-00430)	Replacer 43	
	(09951-00490)	Replacer 49	
	(09951-00560)	Replacer 56	
	(09951-00570)	Replacer 57	
	(09951-00600)	Replacer 60	
	(09951-00680)	Replacer 68	
	(09955-03011)	Claw No.1	

PP

	09950-60020	Replacer Set No.2	
	(09951-00680)	Replacer 68	
	(09951-00730)	Replacer 73	
	(09951-00790)	Replacer 79	
	(09951-00890)	Replacer 89	
	(09951-00910)	Replacer 91	
	09950-70010	Handle Set	
	(09951-07100)	Handle 100	
	(09951-07150)	Handle 150	
	(09951-07200)	Handle 200	

RECOMMENDED TOOLS

	09011-12301	Socket Wrench 30 mm	
	09040-00011	Hexagon Wrench Set	
	(09043-20060)	Socket Hexagon Wrench 6	
	09905-00012	Snap Ring No.1 Expander	

PP

EQUIPMENT

Torque wrench	
Alignment tester	
Toe-in gauge	
Angle gauge	

 

 
 


 


 

LUBRICANT

 


 
Item		Capacity
2AZ-FE (MT)	Outboard joint grease	105 to 125 g (3.7 to 4.4 oz.)
2AZ-FE (AT)	Outboard joint grease	100 to 120 g (3.5 to 4.2 oz.)
3MZ-FE	Outboard joint grease	195 to 225 g (6.9 to 7.9 oz.)
2AZ-FE	Inboard joint grease	170 to 190 g (6.0 to 6.7 oz.)
3MZ-FE	Inboard joint grease	155 to 175 g (5.5 to 6.2 oz.)

DRIVE SHAFT

 

SST

PP

	09240-00020	Wire Gauge Set	
	09520-01010	Drive Shaft Remover Attachment	
	09520-24010	Differential Side Gear Shaft Puller	
	(09520-32040)	Shocker Set	
	09521-24010	Rear Axle Shaft Puller	
	09527-10011	Rear Axle Shaft Bearing Remover	
	09608-16042	Front Hub Bearing Adjusting Tool	
	(09608-02021)	Bolt & Nut	
	(09608-02041)	Retainer	
	09628-62011	Boll Joint Puller	
	09710-30021	Suspension Bushing Tool Set	

	(09710-03141)	Bushing Remover Base	
	09726-40010	Lower Control Shaft Bearing Replacer	
	09930-00010	Drive Shaft Nut Chisel	
	09950-00020	Bearing Remover	

RECOMMENDED TOOLS

	09011-12301	Socket Wrench 30 mm	
	09905-00013	Snap Ring Pliers	

PP

 





 
 
 
 
 
EQUIPMENT







Torque wrench	
Dial indicator with magnetic base	
Alignment tester	
Toe-in gauge	
Angle gauge	

AXLE

SST

PP

	09316-60011	Transmission & Transfer Bearing Replacer	
	(09316-00011)	Replacer Pipe	
	(09316-00031)	Replacer B	
	09520-00031	Rear Axle Shaft Puller	
	09527-17011	Rear Axle Shaft Bearing Remover	
	09608-32010	Steering Knuckle Oil Seal Replacer	
	09628-10011	Ball Joint Puller	
	09628-62011	Boll Joint Puller	
	09930-00010	Drive Shaft Nut Chisel	
	09950-00020	Bearing Remover	
	09950-60010	Replacer Set	

	(09951-00430)	Replacer 43	
	(09951-00600)	Replacer 60	
	09950-60020	Replacer Set No.2	
	(09951-00810)	Replacer 81	
	09950-70010	Handle Set	
	(09951-07100)	Handle 100	

 

 
 
EQUIPMENT

Torque wrench	
Dial indicator with magnetic base	
Tire pressure gauge	
Alignment tester	
Toe-in gauge	
Angle gauge	
Plastic hammer	
Engine Sling Device	
Universal Engine Lifter	
Chain Block	
Wheel balancer	
Camber-caster-kingpin gauge	
Drill (Safety equipment: protective goggles, etc.)	Shock absorber disposal

PP

 

 
 
 
SUSPENSION

SST

	09628-62011	Boll Joint Puller	LOWER BALL JOINT ASSEMBLY FRONT LH STABILIZER BAR FRONT
	09727-30021	Coil Spring Compressor	FRONT SHOCK ABSORBER WITH COIL SPRING REAR SHOCK ABSORBER WITH COIL SPRING
	(09727-00010)	Bolt Set	FRONT SHOCK ABSORBER WITH COIL SPRING
	(09727-00021)	Arm Set	FRONT SHOCK ABSORBER WITH COIL SPRING

PP

RECOMMENDED TOOLS

	09011-12301	Socket Wrench 30 mm	LOWER BALL JOINT ASSEMBLY FRONT LH
	09017-38120	Deep Socket Wrench 12 mm	REAR SHOCK ABSORBER WITH COIL SPRING
	(09043-20050)	Socket Hexagon Wrench 5	REAR SHOCK ABSORBER WITH COIL SPRING REAR SUSPENSION ARM ASSEMBLY NO.1 LH REAR SUSPENSION ARM ASSEMBLY NO.2 LH STABILIZER BAR REAR
	09040-00011	Hexagon Wrench Set	FRONT SHOCK ABSORBER WITH COIL SPRING STABILIZER BAR FRONT REAR SHOCK ABSORBER WITH COIL SPRING REAR SUSPENSION ARM ASSEMBLY NO.1 LH REAR SUSPENSION ARM ASSEMBLY NO.2 LH STABILIZER BAR REAR
	(09043-20060)	Socket Hexagon Wrench 6	FRONT SHOCK ABSORBER WITH COIL SPRING STABILIZER BAR FRONT REAR SHOCK ABSORBER WITH COIL SPRING

TIRE AND WHEEL
EQUIPMENT







 
 


Tire pressure gauge	
Dial indicator with magnetic base	
Wheel balancer	

EQUIPMENT

 

 
Torque wrench	
---------------	--

BRAKE CONTROL

SST

	09023-00101	Union Nut Wrench 10 mm	
	09520-00031	Rear Axle Shaft Puller	
	(09520-00040)	Shocker	
	09521-00020	Drive Shaft Boot Clamping Tool	
	09950-00020	Bearing Remover	
	09950-50013	Puller C Set	
	(09951-05010)	Hanger 150	
	(09952-05010)	Slide Arm	
	(09953-05020)	Center Bolt 150	
	(09954-05021)	Claw No.2	

RECOMMENDED TOOLS

	09042-00010	Torx Socket T30	
	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	



 
PP

EQUIPMENT

Feeler gauge	
Micrometer	
Torque wrench	
Dial indicator with magnetic base	
Slide Calipers	

BRAKE

SST

	09023-00101	Union Nut Wrench 10 mm	
	09737-00013	Brake Booster Push Rod Gauge	
	09737-00020	Brake Booster Push Rod Wrench	

RECOMMENDED TOOLS

	09905-00013	Snap Ring Pliers	
---	-------------	------------------	--

PARKING BRAKE
EQUIPMENT

 
 
 


Torque wrench	
---------------	--

EQUIPMENT


 
Torque wrench	
---------------	--

STEERING COLUMN

SST

 
 


 
 
	09950-50013	Puller C Set	
	(09951-05010)	Hanger 150	
	(09952-05010)	Slide Arm	
	(09953-05020)	Center Bolt 150	
	(09954-05021)	Claw No.2	

RECOMMENDED TOOLS

	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	

PP

RECOMMENDED TOOLS

	09025-00010	Torque Wrench (30 kgf-cm)	
	09040-00011	Hexagon Wrench Set	
	(09043-20060)	Socket Hexagon Wrench 6	
	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	
	09905-00012	Snap Ring No.1 Expander	

PP

EQUIPMENT

Caliper gauge	
Vernier calipers	
Dial indicator	
Feeler gauge	
Micrometer	
Torque wrench	

LUBRICANT

Item	Capacity	Classification
Power steering fluid (Total) 2AZ-FE 3MZ-FE	1.0 liters (1.1 US qts, 0.9 Imp.qts)	ATF DEXRON II or III

 




 
 

 
 
 
SSM


 
 






 

 
	08833-00080	Adhesive 1344 THREE BOND 1344 LOCTITE 242 or equivalent	
--	-------------	---	--

POWER STEERING

 









 

SST




PP

	09023-12701	Union Nut Wrench 17mm	
	09023-38201	Union Nut Wrench 12mm	
	09249-63010	Torque Wrench Adaptor	
	09521-24010	Rear Axle Shaft Puller	
	09527-21011	Rear Axle Shaft Bearing Remover	
	09612-00012	Rack & Pinion Steering Rack Housing Stand	
	09612-22011	Tilt Handle Bearing Replacer	
	09612-24014	Steering Gear Housing Overhaul Tool Set	
	(09613-22011)	Steering Rack Shaft Bushing Puller	
	09616-00011	Steering Worm Bearing Adjusting Socket	
	09628-62011	Boll Joint Puller	

 





	09630-00014	Power Steering Gear Housing Overhaul Tool Set	
	(09631-00132)	Vane Pump Bracket	
	09631-10021	Rack Stopper Wrench	
	09631-12071	Steering Rack Oil Seal Test Tool	
	(09633-00010)	Packing	
	09631-20081	Seal Ring Tool	
	09631-33010	Steering Rack Cover I	
	09640-10010	Power Steering Pressure Gauge Set	
	(09641-01010)	Gauge Assembly	
	(09641-01020)	Attachment A	
	(09641-01030)	Attachment B	
	09922-10010	Variable Open Wrench	

PP

	09950-60010	Replacer Set	
	(09951-00180)	Replacer 18	
	(09951-00250)	Replacer 25	
	(09951-00280)	Replacer 28	
	(09951-00290)	Replacer 29	
	(09951-00320)	Replacer 32	
	(09951-00330)	Replacer 33	
	(09951-00340)	Replacer 34	
	(09951-00400)	Replacer 40	
	(09951-00420)	Replacer 42	
	(09952-06010)	Adapter	
	09950-70010	Handle Set	

	(09951-07100)	Handle 100	
	(09951-07150)	Handle 150	
	(09951-07360)	Handle 360	

RECOMMENDED TOOLS

	09042-00010	Torx Socket T30	
	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	
	09904-00010	Expander Set	
	(09904-00050)	No. 4 Claw	
	95416-00140	Gas Leak Detector (Halogen Leak Detector) (DENSO Part No.)	

EQUIPMENT


 








 
Voltmeter	
Ammeter	
Ohmmeter	
Vinyl tape	
Hexagon wrench (10 mm)	
Hexagon wrench (4 mm)	
Torque socket wrench (E 8)	
Vise pliers	
Gas leak detector	
Belt tension gauge	
Dial indicator with magnetic base	
Radiator cap tester	
Torque wrench	

 

LUBRICANT

Item	Capacity	Classification
Compressor oil	-	ND-OIL 8 or equivalent

 

 
AIR CONDITIONING

SST

	07110-58060	Air Conditioner Service Tool Set	
	(07117-58060)	Refrigerant Drain Service Valve	
	(07117-58070)	T-Joint	
	(07117-58080)	Quick Disconnect Adapter	
	(07117-58090)	Quick Disconnect Adapter	
	(07117-78050)	Refrigerant Charging Gauge	
	(07117-88060)	Refrigerant Charging Hose	
	(07117-88070)	Refrigerant Charging Hose	
	(07117-88080)	Refrigerant Charging Hose	
	09249-63010	Torque Wrench Adaptor	
	09870-00015	A/C Quick Joint Puller No.1	

	09870-00025	A/C Quick Joint Puller No.2	
	95047-10400	Magnet Clutch Stopper (DENSO part No.)	

RECOMMENDED TOOLS

	09042-00010	Torx Socket T30	
	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	

PP

 
 



 



 
 
EQUIPMENT



Torque wrench	
Feeler gauge	
Bolt Length: 35.0 mm (1.378 in.) Pitch: 1.0 mm (0.039 in.) Diameter: 6.0 mm (0.236 in.)	Airbag disposal
Tire Width: 185 mm (7.28 in.) Inner diameter: 360 mm (14.17 in.)	Airbag disposal
Tire with disc wheel Width: 185 mm (7.28 in.) Inner diameter: 360 mm (14.17 in.)	Airbag disposal
Plastic bag	Airbag disposal

SUPPLEMENTAL RESTRAINT SYSTEM

SST

PP

	09082-00700	SRS Airbag Deployment Tool	
	09082-00750	Airbag Deployment Wire Sub-harness No.3	
	09082-00760	Airbag Deployment Wire Sub-harness No.4	
	09082-00780	Airbag Deployment Wire Sub-harness No.6	
	09082-00802	Airbag Deployment Wire Sub-Harness No. 8	
	(09082-10801)	Wire A	
	(09082-30801)	Wire C	
	09843-18060	SRS Check Wire	
	09950-50013	Puller C Set	
	(09951-05010)	Hanger 150	
	(09952-05010)	Slide Arm	

	(09953-05020)	Center Bolt 150	
	(09954-05021)	Claw No.2	

 
 
EQUIPMENT

Torque wrench	
---------------	--



SEAT BELT

SST

PP



	09082-00700	SRS Airbag Deployment Tool	
	09082-00770	Airbag Deployment Wire Sub-harness No.5	

RECOMMENDED TOOLS

	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	


 
THEFT DETERRENT SYSTEM

RECOMMENDED TOOLS

	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	

ENGINE IMMOBILISER

RECOMMENDED TOOLS

	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	

PP

CRUISE CONTROL

RECOMMENDED TOOLS


 
	09042-00010	Torx Socket T30	CRUISE CONTROL MAIN SWITCH
---	-------------	-----------------	----------------------------

EQUIPMENT

Torque wrench	
---------------	--

LIGHTING

RECOMMENDED TOOLS

	09082-00040	TOYOTA Electrical Tester	LIGHTING SYSTEM
	(09083-00150)	Test Lead Set	LIGHTING SYSTEM

PP

EQUIPMENT

Voltmeter	
Ammeter	
Ohmmeter	
Vinyl tape	
Torque wrench	


EQUIPMENT

Voltmeter	
Ohmmeter	
Vinyl tape	
Wire brush	
Torque wrench	


 


WIPER AND WASHER

SST


 
	09843-18040	Diagnosis Check Wire No.2	WIPER AND WASHER SYSTEM
---	-------------	---------------------------	-------------------------

RECOMMENDED TOOLS

	09082-00040	TOYOTA Electrical Tester	WIPER AND WASHER SYSTEM
	(09083-00150)	Test Lead Set	WIPER AND WASHER SYSTEM

DOOR LOCK



RECOMMENDED TOOLS

	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	

PP

 





METER

RECOMMENDED TOOLS

	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	

AUDIO / VISUAL

RECOMMENDED TOOLS

	09042-00010	Torx Socket T30	
	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	
	09904-00010	Expander Set	
	(09904-00060)	No. 5 Claw	
	09905-00013	Snap Ring Pliers	



PP

EQUIPMENT

Vinyl tape	
Torque wrench	

NAVIGATION

RECOMMENDED TOOLS


 
	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	

EQUIPMENT

Torque wrench	
---------------	--

HORN

RECOMMENDED TOOLS

	09082-00040	TOYOTA Electrical Tester	HORN SYSTEM
	(09083-00150)	Test Lead Set	HORN SYSTEM

PP

EQUIPMENT

Torque wrench	
---------------	--

GARAGE DOOR OPENER

EQUIPMENT


 
Home Link Tester	
------------------	--

SSM

08833-00030	Three cement black or equivalent	WINDSHIELD GLASS (CONVERTIBLE) WINDSHIELD GLASS (COUPE) QUARTER WINDOW ASSEMBLY (COUPE) BACK WINDOW GLASS (COUPE)
08850-00801	Windshield Glass Adhesive Set or equivalent	WINDSHIELD GLASS (CONVERTIBLE) WINDSHIELD GLASS (COUPE) QUARTER WINDOW ASSEMBLY (COUPE) BACK WINDOW GLASS (COUPE)

WINDSHIELD / WINDOWGLASS

RECOMMENDED TOOLS

	09082-00040	TOYOTA Electrical Tester	WINDOW DEFOGGER SYSTEM
	(09083-00150)	Test Lead Set	WINDOW DEFOGGER SYSTEM



PP

EQUIPMENT

Knife	
Piano wire	Windshield
Plastic sheet	To avoid surface damage
Sealer gun	
Tape	To avoid surface damage
Torque wrench	
Wooden block or similar object	For tying both piano wire ends

MIRROR

RECOMMENDED TOOLS

	09082-00040	TOYOTA Electrical Tester	POWER MIRROR CONTROL SYSTEM
	(09083-00150)	Test Lead Set	POWER MIRROR CONTROL SYSTEM

EQUIPMENT

 
 
 


Torque wrench	
---------------	--

EQUIPMENT

 
Torque wrench	
---------------	--

INSTRUMENT PANEL

SST

 

 

	09950-50013	Puller C Set	INSTRUMENT PANEL SAFETY PAD SUB-ASSEMBLY
	(09951-05010)	Hanger 150	INSTRUMENT PANEL SAFETY PAD SUB-ASSEMBLY
	(09952-05010)	Slide Arm	INSTRUMENT PANEL SAFETY PAD SUB-ASSEMBLY
	(09953-05020)	Center Bolt 150	INSTRUMENT PANEL SAFETY PAD SUB-ASSEMBLY
	(09954-05021)	Claw No.2	INSTRUMENT PANEL SAFETY PAD SUB-ASSEMBLY

RECOMMENDED TOOLS

	09042-00010	Torx Socket T30	INSTRUMENT PANEL SAFETY PAD SUB-ASSEMBLY
---	-------------	-----------------	---

SEAT

RECOMMENDED TOOLS

	09042-00010	Torx Socket T30	
	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	
	09200-00010	Engine Adjust Kit	

EQUIPMENT

Tacker	
Hog ring	
Hog ring plier	
Tape	To avoid surface damage
Torque wrench	
Scraper	



EQUIPMENT


Clip remover	
Tape	To avoid surface damage
Torque wrench	

SSM

 
 
 


	08833-00070	Adhesive 1324, THREE BOND 1324 or equivalent	
--	-------------	---	--

ENGINE HOOD / DOOR

SST


	09804-24010	Luggage Compartment Door Torsion Bar Tool	
---	-------------	---	--

RECOMMENDED TOOLS

	09041-00020	Torx Driver T25	
	09042-00010	Torx Socket T30	
	09042-00020	Torx Socket T40	
	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	

EXTERIOR

RECOMMENDED TOOLS

	09070-20010	Moulding Remover	FRONT DOOR WINDOW FRAME MOULDING REAR LH
---	-------------	------------------	---


EQUIPMENT

Clip remover	
Double-sided tape	
Heat light	Moulding
Protective tape	To avoid surface damage.
Piano wire	
Torque wrench	
Wooden block or similar object	For tying both piano wire ends

PP

INTERIOR

RECOMMENDED TOOLS

	09070-20010	Moulding Remover	ROOF HEADLINING ASSEMBLY
---	-------------	------------------	--------------------------

EQUIPMENT

 

Clip remover	
--------------	--

LUBRICANT

Item	Capacity	Classification
MP grease	-	-

SLIDING ROOF

RECOMMENDED TOOLS

	09041-00020	Torx Driver T25	SLIDING ROOF SYSTEM (COUPE)
	09082-00040	TOYOTA Electrical Tester	SLIDING ROOF SYSTEM (COUPE)

EQUIPMENT

 
 
 
 
 
 

Torque wrench	
Clip remover	

LUBRICANT

Item	Capacity	Classification
MP grease	-	-

CONVERTIBLE

RECOMMENDED TOOLS

	09040-00011	Hexagon Wrench Set	
	(09043-20080)	Socket Hexagon Wrench 8	
	09041-00020	Torx Driver T25	
	09042-00020	Torx Socket T40	
	09050-00032	Air Drill	
	09050-20010	Air Riveter	
	09082-00040	TOYOTA Electrical Tester	



PP

EQUIPMENT

Torque wrench	
Rivet	
Staple gun	
Staple	
Clip remover	
Adhesive	
Tape	

CAN COMMUNICATION

RECOMMENDED TOOLS

	09082-00040	TOYOTA Electrical Tester	
	(09083-00150)	Test Lead Set	